



Safety Guide for EPS System

Unsupported Spans



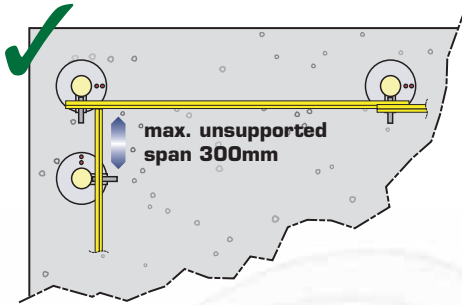


Unsupported spans of K guard barrier should not exceed 300mm. Always use 2 socket bases at corners.

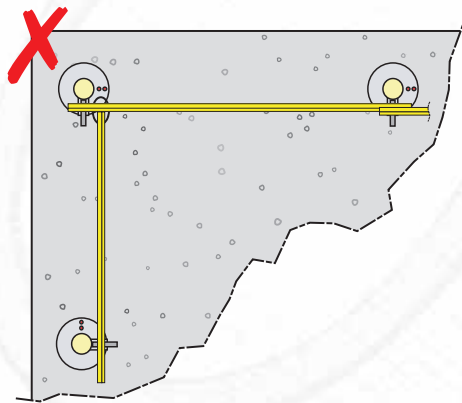

Do not use temporary ties to tie an unsupported span to another barrier at a corner. Each panel must be supported by 2 posts.

Panel Orientation

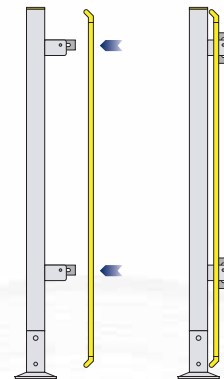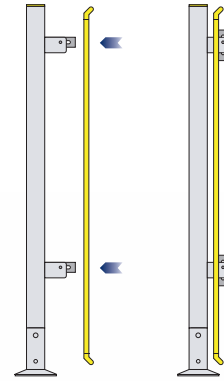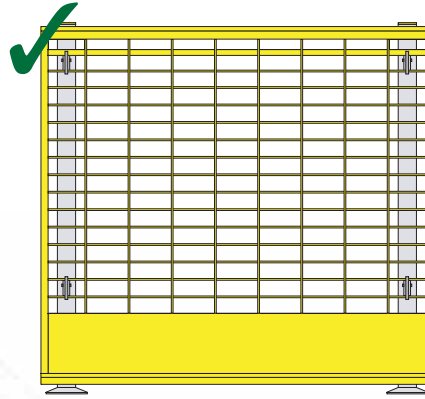


Barriers should always be installed with labelled side facing outwards.

Foreign Materials

Always use K guard safety posts when using sockets and clamps

No foreign materials such as scaffold tube should be inserted into sockets or clamps as K lock system will be ineffective.

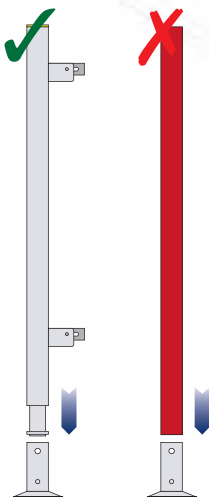

Safety Harnesses

The K guard system is not designed for anchorage of fall arrest safety devices.

